



Knowledgebase > DAB+ Radio > How do I set an alarm on a Pop Midi, Mini and Maxi?

How do I set an alarm on a Pop Midi, Mini and Maxi?

Laura - 2020-11-03 - DAB+ Radio

Please make sure your radio is switched on.

Tap the menu button **alarm** will appear on the screen tap **select**

Select either Alarm 1 or 2 by pressing < **or** > and then **select**.

Now press < **or** > until **ON** is displayed on screen and press **select**

Now set the time you would like the alarm to sound at by pressing < **or** > to change the hours press **select** to confirm. Now do the same to select the minutes. Press **select** to confirm

Now set the duration (This is how long the alarm will sound for) press < **or** > to select 15-90 minutes then press **select**

Now set the source press < **or** > to select Digital, FM or Tone and then press **select**

Now select how often you would like the alarm to sound by pressing < **or** > and then press **select**

Finally you can set the volume you would like the alarm to sound at press <**or** >and then select (Note you can't change the volume of a Tone alarm only Digital or FM)

The radio will now report the alarm is **saved**.